



File Name: casio 3061 manual.pdf
Size: 4346 KB
Type: PDF, ePub, eBook
Category: Book
Uploaded: 19 May 2019, 19:30 PM
Rating: 4.6/5 from 617 votes.

Status: AVAILABLE

Last checked: 2 Minutes ago!

In order to read or download casio 3061 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

- [Register a free 1 month Trial Account.](#)
- [Download as many books as you like \(Personal use\)](#)
- [Cancel the membership at any time if not satisfied.](#)
- [Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with casio 3061 manual . To get started finding casio 3061 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

casio 3061 manual

To get the most out of your purchase, be sure to read this manual carefully. Keep the watch exposed to bright light. The electricity generated by the solar cell of the watch is stored by a built-in battery. Leaving or using the watch where it is not exposed to light causes the battery to run down. Charging is reduced significantly if the face is only partially covered. Leaving the watch in the dark can cause the battery to run down, which will result in some watch functions to be disabled. If the battery goes dead, you will have to reconfigure watch settings after recharging. To ensure normal watch operation, be sure to keep it exposed to light as much as possible. All functions enabled

LEVEL 1 LEVEL 2 LEVEL 3 LEVEL 4 Charge Rechargeable battery Bright Light Electrical energy Solar cell Converts light to electrical power. LEVEL 1 LEVEL 2 LEVEL 3 LEVEL 4 Some or all functions disabled Discharge Battery charges in the light. The following guidelines give an idea of the charging time required to recover from a single illumination operation. If the display of the watch is blank. Further details and technical information can be found in the "Reference" section.

Current Time Setting This watch adjusts its time setting automatically in accordance with a time calibration signal. For more information, see "To specify your Home City". The term "North America" in this manual refers to the area that consists of Canada, the continental United States, and Mexico. To specify your Home City

1. In the Timekeeping Mode, hold down A the city code starts to flash. Johns City Code HKG BJS TPE SEL TY O City Name Hong Kong Beijing Taipei Seoul Tokyo 11111111111113. Press A to exit the setting screen. If it does not, it should adjust automatically after the next auto receive operation in the middle of the night. When any auto receive is successful, the remaining auto receive operations are not performed.

<http://www.rbconnections.co.uk/uploads/bubble-witch-manual.xml>

- **casio 3061 manual, casio 3061 watch manual, casio g shock 3061 manual, casio 3061 manual, casio 3061 manual, casio 3061 manual.**

For more information, see "To perform manual receive". To get the most out of your purchase, be sure to read this manual carefully. Keep the watch exposed to bright light 111111111111 Bright Light Solar cell The electricity generated by the solar cell of the watch is stored by a built-in battery. Leaving or using the watch where it is not exposed to light causes the battery to run down. Page 2 Operation Guide 3050 3061 Inside a vehicle Near household appliances, office equipment, or a mobile phone Near a construction site, airport, or other sources of electrical noise Near high-tension power lines Among or behind mountains About the Receiving Indicator The receiving indicator shows the strength of the calibration signal being received. For best reception, be sure to keep the watch in a location where signal strength is strongest. Page 3 Operation Guide 3050 3061 Countdown Timer Module 3050 A Signal Reception Troubleshooting Check the following points whenever you experience problems with signal reception. Page 4 Operation Guide 3050 3061 Power Supply To select the operation of Alarm 1

1. In the Alarm Mode, use D to select Alarm 1.
2. Press B to cycle through the available settings in the sequence shown below.

Getting Acquainted. Congratulations upon your selection of this CASIO watch. To get the most out of your watch

Keep the watch exposed to bright light Bright Light. Solar cell. The electricity generated by the solar cell of the watch is Leaving or using the watch where Make sure the watch is exposed to light as much as possible. The following guidelines give an idea of the charging time required to recover from a

Approximately 5 minutes exposure to bright sunlight coming in through a window. Approximately 50 minutes exposure to indoor fluorescent lighting If the display of the watch is blank. If the display of the watch is blank, it means that the watch's Power Saving function About This Manual. Module

3050 A. <http://modern-pro.ru/files/bubbleator-b-quick-manual.xml>

Leaving theIf the battery goes dead, you will have to reconfigure watchTo ensure normal watch operation, be sure to keep itBattery charges in the light. Solar cellModule 3050 B. Battery discharges in the dark. Bright Light. ElectricalModule 3061All of the illustrations in thisAll sample displaysRechargeable battery. World Time Mode. General Guide. Timekeeping Mode. Stopwatch ModePress C. Countdown Timer Mode. Alarm Mode. Radiocontrolled Atomic Timekeeping. Module 3050 A. Home TimeModule 3061. This watch receives a time calibration signal and updatesCollins, Japan. Current Time Setting. This watch adjusts its time setting automatically inYou can alsoFor more information, seeSee “Timekeeping”America. The term “North America” in this manual refers to the area that consists of. Canada, the continental United States, and Mexico.To specify your Home CityCity code. City. CodeCity City. Name. Code Name. Lisbon. ATH Athens. London. MOW Moscow. Madrid. Paris. Rome. Berlin. Stockholm. Japan Signal. City City. Code Name. HKG Hong Kong. BJS Beijing. TPE Taipei. SEL Seoul. TYO Tokyo. City. CodeCity. City. Name. Code. HonoluluVancouverEdmontonImportant! City code. If it does not, it should adjust automatically after the next auto receiveYou can also perform manual receive or youCity Codes and Transmitters”.ANC Anchorage. For details about turning on auto receive for these city codes, seeSee “To turn auto receive on andTime Calibration Signal Reception. There are two different methods you can use to receive the time calibration signalWith auto receive, the watch receives the time calibration signal automatically up toFor more information, see “About Auto Receive”. Manual receive lets you start a time calibration receive operation with the press of aImportant!Make sure there are no metal objects nearby. City. Name. Winnipeg. Chicago. Miami. Toronto. New York. Halifax. St. JohnsInside aNearNear aNear hightensionAmong orAbout the Receiving Indicator.

The receiving indicator shows the strength of the calibration signal being received. ForTake care that you do not perform anyHome City code setting as shown below. If you use the watch in Japan or EuropeIf it cannotInside orNoteReception is notBefore going to bed for the night, remove the watch from your wrist, and put it in aTimekeeping Mode. The receive operation will be performed whenever the displayHome City Codes and Transmitters. Frequency. Fukushima JapanFort Collins, ColoradoU.S. Signal. Reception Ranges. Transmitter Indicator. Module 3050 AModule 3050 B. U.K. and German SignalsMainflingenStandard Time. Daylight. Midnight 100 am 200 am 300 am 400 am 500 am. Saving Time. To check the latest signal reception results. In the Timekeeping Mode, press D to display the LastSignal screen.Signal screen.OFF is flashing. This is the setting screen.DaylightSaving TimeStandard Time 200 am 300 am 400 am 500 am Midnight 100 amDaylightSaving TimeStandard Time 300 am 400 am 500 am Midnight 100 am 200 amDaylightSaving TimeStandard Time 400 am 500 am Midnight 100 am 200 am 300 amDaylightSaving TimeStandard Time Midnight 100 am 200 am 300 am 400 am 500 amAbout Auto Receive. The watch receives the time calibration signal automatically up to six times a day. When any auto receive is successful, the remaining auto receive operations are notJapan SignalRadio interference may also cause problems with reception. Mainflingen Germany or Rugby England transmitters 500 kilometers 310Fort Collins United States transmitter 600 miles 1,000 kilometersTo perform manual receiveReceivingTransmitter indicatorReceive successfulReceive timeThe watch will enter the Timekeeping Mode if you press. Receive date C or if you do not perform any button operation forReceive failedThe watch will enter the Timekeeping Mode withoutFukushima. Your Home City. During signal reception, a transmitter indicator will flash toJP40 Fukushima Japan. US60 Fort Collins, Colorado the United States. GE77.

5 Mainflingen Germany. UK60 Rugby EnglandModule 3061. Fort CollinsRugby. StrongWeakReceiving indicatorTransmitter. Rugby England. Mainflingen GermanyHome City CodeReceive timeCountdown Timer. Module 3050 A. Signal Reception Troubleshooting. Check the following points whenever you experience problems with signal reception. Problem. Probable Cause.

What you should do Time setting is Auto DST. World Time. Module 3050 A. City code. The World Time Mode shows you the current time in 48 Home City time settings and make the necessary World Time Mode, which you enter by pressing C. Current time in. To view the time in another city While in the World Time Mode, press D to scroll While in the World Time Mode, press B to scroll Table". Module 3061. Timekeeping. Mode time. You can set the countdown timer within a range of one to Countdown Timer Mode, which you enter by pressing Module 3061. To set the countdown start time To use the countdown timer. Press D while in the Countdown Timer Mode to start the countdown timer. The countdown time is reset automatically to its Press D again to Alarms. Module 3050 A. To toggle a city code time between Standard Time and Daylight Saving Time Saving Time setting you want to change. DST indicator Other city codes are not You can set five independent Daily Alarms. When an You can also turn on an Hourly Time Signal that causes. Alarm number the watch to beep twice every hour on the hour. Timekeeping Mode time. The hourly time signal screen is indicated by 00. Alarm time Hour Minutes Module 3061. Alarm Mode, which you enter by pressing C. Stopwatch. Module 3050 A. The stopwatch lets you measure elapsed time, split times, Hours. Minutes Seconds if you exit the Stopwatch Mode. Module 3061 Stopwatch Mode, which you enter by pressing C. To measure times with the stopwatch. Elapsed Time Start Two Finishes Alarm Operation. Split Time First runner finishes. Display time of first Second runner Display time of About Auto Start.

With Auto Start, the watch performs a 5 second countdown, and stopwatch operation During the final three seconds of the countdown, a beeper sounds with each second. To use Auto Start Stopwatch Mode, press A. The alarm sounds at the preset time for about 10 seconds. In the case of the snooze Note Displaying the Timekeeping Mode setting screen. Displaying the Alarm 1 setting screen. To test the alarm. In the Alarm Mode, hold down D to sound the alarm. To turn Alarms 2 through 5 on and off Module 3050 A Onetime alarm on Module 3061 Power Supply. To select the operation of Alarm 1 Snooze alarm on indicator and onetime alarm on indicator. Module 3050 A. Onetime alarm on. Snooze alarm on. Alarm off. Snooze alarm on. Alarm off. Module 3061. Onetime alarm on To turn the hourly time signal on and off Module 3050 A. Signal 00. Hourly time signal on This watch is equipped with a solar cell and a special rechargeable battery secondary Solar cell. Example Orient the watch so its face Important! However, after very long use, the If you experience Use of the wrong This helps to keep the rechargeable Battery Power Indicator and Recover Indicator. The battery power indicator shows you the current power level of the rechargeable Level Battery Power Indicator. Function Status. Module 3050 A. All functions enabled. All functions enabled. Auto light switch indicator. Module 3061 The watch has an EL electroluminescent panel that Module 3050 A Illumination Module 3061. Level Battery Power Indicator. All functions enabled. Battery power indicator. Parallel to More than. Warning! Be especially careful when running or engaged in Also take care that To turn the auto light switch on and off. In Timekeeping mode except when a setting screen is on the display, hold down L Moving the watch to a position that is parallel to the ground and then tilting it Turning on the auto light switch causes illumination to turn on whenever you position Note that this watch features a "Full Auto.

EL Light," so the auto light switch operates only when available light is below a certain Function Status All functions, including auto All functions, including In any mode press L to illuminate the display. Alarm, hourly time signal, All functions, including auto All functions, including Illumination. Beeper tone. Time calibration signal reception. After some time, battery power will recover and the charge indicator CHG will Charging Precautions. Certain charging conditions can cause the watch to become very hot. Avoid leaving Also note that allowing the watch to become very hot can cause its liquid crystal The appearance of the LCD should become normal again when Warning! Leaving the watch in bright light to charge its rechargeable battery can cause it The watch can become particularly hot when exposed to the following Charging Guide. After a full charge, timekeeping remains enabled for up to about 9 months. Exposure Level Brightness. Approximate Exposure Time. Outdoor Sunlight 50,000 lux Sunlight Through a Window 10,000 lux Daylight Through a Window on a

Cloudy Day Indoor Fluorescent Lighting 500 lux Screen Daylight Through a Window Indoor Fluorescent Lighting Actual required exposure Timekeeping. Use the Timekeeping Mode to set and view the current time and date. Timekeeping Mode. Day of the Week. Daylight Saving Time DST. Daylight Saving Time summer time advances the time setting by one hour from. Standard Time. Remember that not all countries or even local areas use Daylight. Saving Time. The time calibration signals transmitted from Mainflingen Germany, Rugby Time and DST summer time automatically in accordance with the signals. Press B. Hour Minutes Seconds. Reference. This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and Day of week. Button Operation Tone. Module 3050 A. Press D. Module 3050 A. MUTE indicator. Module 3061. Press D. Module 3061.

The button operation tone sounds any time you press one You can turn the button operation Hourly Time Signal, and Countdown Timer Mode alarm To turn the button operation tone on and off. In any mode except when a setting screen is on the Setting the Time and Date. Make sure you select your Home City code before you change the current time and Timekeeping Mode settings. Because of this, World Time Mode times will not be Power Saving Function. Module 3050 A. To set the time and date When turned on, the Power Saving function enters a sleep The table below Saving function. Power saving indicator. Module 3061 Press D. Day of week. Module 3061 Power Saving Power Saving Function Auto DST . PM indicator. Toggle Power Saving on To change the Daylight Saving Time summer time setting PM indicator. Press B. Change the hour or minutes. Recovery Times. The table below shows the amount exposure that is required to take the battery from Exposure Level. Approximate Exposure Time Level 5 Level 4 Level 3. Level 2. Level 1. Date. Module 3050 A. Do this. Use D east and B west. Press D. Cycle between auto DST Daylight Saving Time Reset the seconds to. Press D. Outdoor Sunlight Sunlight Through a Window To do this. Change the city code. City code. City Code Power. Saving. Day. Month. Seconds. Year. Hour. Minutes Display. Elapsed Time Blank, with Power Saving Operation. All functions enabled, except Beeper tone, illumination, and If the watch To recover from the sleep state. Perform any one of the following operations. Auto light switch precautions If illumination If this does not work, drop your To turn Power Saving on and off Illumination Precautions Auto Return Features Scrolling. The B and D are used in various modes and setting screens to scroll through data. In most cases, holding down these buttons during a scroll operation scrolls through Initial Screens. When you enter the World Time or Alarm Mode, the data you were viewing when you Radiocontrolled Atomic Timekeeping Precautions.

Because of this, such Setting of the date by a time When only time data is received, Timekeeping Once you set the date, there should be no reason to change Level 5. It is based upon carefully maintained Earth's rotation. This does not necessarily indicate City Code Table. City. Code. City Honolulu. Anchorage. Vancouver. Los Angeles. Edmonton. Denver. Mexico City. Winnipeg. Chicago. Miami. Toronto. New York. Caracas. Halifax. St. Johns. Rio De Janeiro. Praia. Lisbon. London. Madrid. Paris. Rome. Berlin. Stockholm. Athens. Cairo. Jerusalem. Moscow. Jeddah. Tehran. Dubai. Kabul. Karachi. Delhi. Dhaka. Yangon. Bangkok. Hong Kong. Beijing. Taipei. Seoul. Tokyo. Adelaide. Guam. Sydney. Noumea. Wellington Other major cities in same time zone. Papeete. Nome. San Francisco, Las Vegas. El Paso, Edmonton, Culiacan. Montreal, Detroit, Miami, Boston. Panama City, Havana, Lima, Bogota. La Paz, Santiago, Port Of Spain. Sao Paulo, Buenos Aires, Brasilia, Montevideo. Dublin, Casablanca, Dakar, Abidjan. Milan, Amsterdam, Algiers, Hamburg, Frankfurt, Vienna. Helsinki, Istanbul, Beirut, Damascus. Cape Town. Kuwait, Riyadh, Aden, Addis Ababa, Nairobi. Shiraz. Abu Dhabi, Muscat. Singapore, Kuala Lumpur, Manila, Perth, Ulaanbaatar. Pyongyang. Darwin. Melbourne, Rabaul. Port Vila. Christchurch, Nadi, Nauru Island. Male. Mumbai, Kolkata. Colombo. Jakarta, Phnom Penh, Hanoi, Vientiane. Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Casio Watch 3061. To start viewing the user manual Casio Watch 3061 on full screen, use the button Fullscreen. However, if you do not want to take up too much of your disk space, you can always

download it in the future from ManualsBase. The option to print the manual has also been provided, and you can use it by clicking the link above Print the manual. You do not have to print the entire manual Casio Watch 3061 but the selected pages only. paper.

If you want to quickly view the content of pages found on the following pages of the manual, you can use them.